

Operator's Manual



The Quietek

Congratulations!

Congratulations on your purchase of the QuietekTM euthanasia system. Please read this operator's manual which explains proper operation of the instrument.

We're confident that your Quietek will become an essential tool in your facility and we wish you success with your work.

Contents

Contents
Quietek Components2
Preparing the Quietek for Use4
Adjusting the Settings 4
Performing a Run4
Purging the Chamber5
Cleanup 5
Froubleshooting5
Support5
Specifications6
Warranty6
Warnings and Cautions 6
Disclaimer
Contact Info7

Your Distributor is:

Braintree Scientific, Inc.


PO Box 850498, Braintree, MA 02185

781-917-9526

Email: Info@braintreesci.com Web: www.braintreesci.com



Quietek Components

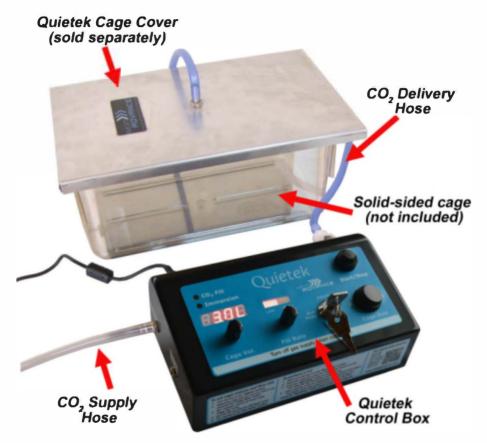

Your Distributor is:

Braintree Scientific, Inc.

PO Box 850498, Braintree, MA 02185

781-917-9526

Email: Info@braintreesci.com Web: www.braintreesci.com



Quietek Components





Caution: Follow the Instructions in the Operator's Manual



This product complies with European Low Voltage and EMC Directives



Please dispose of the Quietek in accordance with local regulations

Your Distributor is:

Braintree Scientific, Inc.

PO Box 850498, Braintree, MA 02185

781-917-9526

Email: Info@braintreesci.com

Web: www.braintreesci.com

Preparing the Quietek for Use

- Insert the power supply lead into the receptacle (power jack) on the back of the Quietek control box, and plug the power supply into a standard outlet.
- Connect the CO₂ delivery hose to its fitting on the control box, and attach the other end to the barbed fitting on the cage cover. The Quietek 2 has fittings for operation with up to two cage setups.

Ensure that the cage cover is large enough so that bent edges fit entirely over the rim of the cage. If any part of the bent metal edge of the lid is in contact with the cage rim, the lid may not seat properly.

Adjusting the Settings

Before you begin, determine the volume of your cage in liters.

- Select the setting that you wish to adjust (A or B) using the "Cage Size" switch. The Quietek can store two different cage volume/flow rate combinations.
- · Turn the key to the "Adjust" position.
- Set the cage volume using the "Cage Vol." knob. Measurements are shown in liters.
- Set the desired fill rate using the "Fill Rate" knob. Flow rate is controllable within the range specified in the AVMA guidelines.

 Turn the key to the "Run Mode" position. If the key is removed in run mode, the machine will still run and the settings will not be adjustable.

Note: For the Quietek 2, settings A or B (depending on the orientation of the "Cage Size" switch) will apply to every cage or chamber that is connected to the device. You cannot have one cage run on A and the other one run on B at the same time.

Performing & Run

- For every cage or chamber being used, confirm that the lid is properly fitted, with the lining in full contact with the cage rim.
- Open the valve on the CO₂ source.
- Ensure that the key lock is in the "Run Mode" position. Run will not start if the key is in the "Adjust" position.
- Press the "Start/Stop" button. If you are using the Quietek 2, press the "Start/Stop" button(s) for the cage(s) that you want to use. The "CO₂ fill" light corresponding to the cage you are using will illuminate, and the timer will count down until set cage volume of gas has been delivered.
- When the cage is filled, the CO₂ flow will stop. The "Immersion" light will illuminate and the timer will show time elapsed since immersion began.
- To stop the run, press "Start/Stop" again. The controller will reset, and another run can be performed with the same settings if desired. The CO₂

Your Distributor is:
Braintree Scientific, Inc.
PO Box 850498, Braintree,
MA 02185781-917-9526
Email: Info@braintreesci.com
Web: www.braintreesci.com

supply does not need to be shut off between runs.

 If you wish to perform a run with different settings, you can change the "Cage Size" switch to the other position if the settings have been saved previously. To perform a run with new settings, adjust the parameters as described in the "Adjusting the Settings" section above.

Emergency stop: The run can be stopped at any time by pressing the "Start/Stop" button.

Note: If the CO₂ pressure is below 15 psi or if the instrument cannot deliver 30% chamber volume per minute, the digital display will alternately flash "CO2" and "LO".

Purging the Chamber

To purge, tip the chamber over to release CO₂. This process may take several minutes based on the size of the chamber and air flow in the area.

Cleanup

After use, shut off the CO₂ supply. Wipe down the inside of the lid with warm water and then spray with 70% ethanol or another suitable cleaner. The unit may be unplugged if desired.

The Quietek controller box can also be wiped down with a water and mild detergent such as Alconox. Ethanol or other alcohols will dull the finish of the box. The unit should not be immersed in liquid.

Troubleshooting

If the Quietek doesn't turn on, the plug of the power supply cord may not be in a live wall outlet or the power supply connector may not be fully inserted in the socket on the side of the Quietek.

If the cage volume indicator is flashing "CO2" and "LO", the CO₂ pressure from the supply tank or line is too low for the Quietek to operate properly. Check the CO₂ source to make sure that it is securely connected to the device.

Note: Some institutions may require external confirmation of the gas flow rate from the Quietek controller. This may be most conveniently done by disconnecting the lid and attaching a precision CO₂ flowmeter to the tube.

Support

FAQs and other helpful information are available on our website,

http://www.firstvivo.com. Under the Products tab on the left-hand menu bar, click the link to the Quietek. If you cannot find an answer there, please contact customer service by email at support@firstvivo.com or by telephone at 1.989.272.8486.

Specifications

Size: depends upon model
Weight: depends upon model
Power Requirement: 12 V, 0.70 Amp

Your Distributor is: Braintree Scientific, Inc. PO Box 850498, Braintree, MA 02185 781-917-9526 Email: Info@braintreesci.com

Email: Info@braintreesci.com Web: www.braintreesci.com

Relative Humidity: 5 - 90% noncondensing

Operating Temperature: 4 - 40° C

Altitude: <2000m

Storage Temperature: -40 - 40°C

CO₂ Pressure Requirement: 20-50 psi

Meets requirements **C** €

Warranty

First vivo warrants its Products against defects in materials and workmanship for time periods which vary according to the Product. Within these time periods, First vivo will replace or repair, without charge to the original purchaser, any part which is defective. The Quietek warranty is one year.

The warranty is void if the Product is defective due to product accident, product modification, exposure radiation other than for sterilization. connection to an improper electrical supply, lack of proper maintenance, contamination, improper installation or misuse. If the product is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. The warranty shall also not apply to defects arising from fire, flood, lightning or other conditions unrelated to correct operation of the Product.

First vivo's liability is limited, at the company's election, to (1) refund of the original purchaser's purchase price for the Product (2) repair of the Product, or (3) replacement of the Product or defective parts. Evidence of purchase

by the original purchaser is required. First vivo may also request documentation of proper maintenance,

if applicable.

indirect.

First vivo makes no other warranty, expressed or implied, with respect to its Products. FIRST VIVO MAKES NO WARRANTY RESPECTING THE MERCHANTABILITY OF THE PRODUCTS OR THEIR SUITABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR

consequential damages of any nature.

Any recovery for any claim shall be limited to the original purchase price for the product.

USE. First vivo shall not be liable for

incidental

or

special.

OPERATOR'S RESPONSIBILITY

Provide proof of purchase and provide normal care and maintenance.

Warnings and Cautions

Read the use's manual before operating.

No serviceable parts are inside. Use only with CO₂ supply line or tank.

For indoor use only.

Use in a well ventilated area.

Pollution Degree 2 per EN 61010-1.

Enclosure Protection: Not Protected Against the Ingress of Moisture.

Do not immerse in liquid.

Before using the Quietek, touch a bare metal surface to discharge static electricity.

Your Distributor is: Braintree Scientific, Inc.

PO Box 850498, Braintree, MA 02185 781-917-9526

Email: Info@braintreesci.com Web: www.braintreesci.com

Disclaimer

First vivo makes no representations or warranties. expressed. statutory implied, regarding the fitness or merchantability of this product for any particular purpose. In no event shall First vivo be liable for incidental or consequential damages. First vivo is not liable for any damages, including but limited to. lost modifications to the product described in lost savings, or other incidental or consequential damages arising from ownership or use of this product, or for any delay in the performance of its obligations under the warranty due to causes beyond its control.

First vivo also reserves the right to make any improvements or changes to this manual at any time, without notice of these changes. First vivo products are not designed, intended, or authorized for use in applications or as system components intended to support or sustain human life, as a clinical medical device for humans, or for any application in which the failure of the product could create a situation where personal injury or death may occur.

All brand and product names used in this manual are the trademarks of their respective owners.

Note: No animals were harmed or euthanized for the main purpose of developing or testing this product.

Your Distributor is:

Braintree Scientific, Inc.

PO Box 850498, Braintree, MA 02185

781-917-9526

Email: Info@braintreesci.com Web: www.braintreesci.com

Contact Information

