



Step 1 put mouse into jig




- Add the nose clamp to fix the head

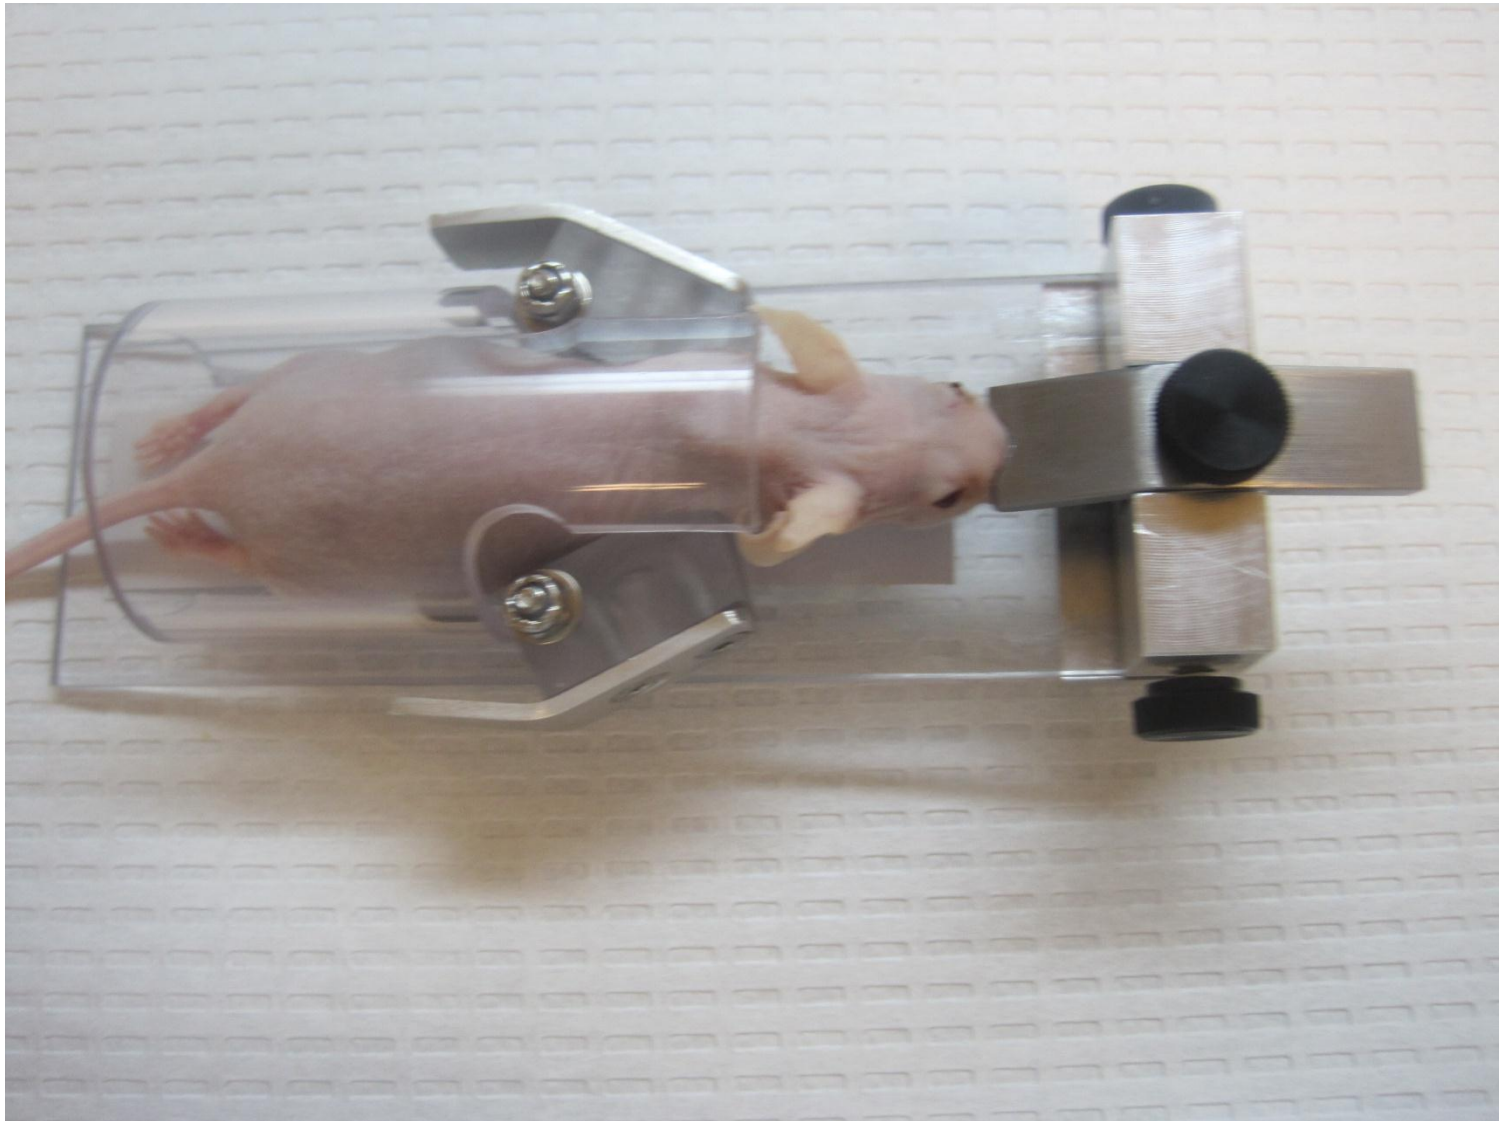

- Put head as low as possible

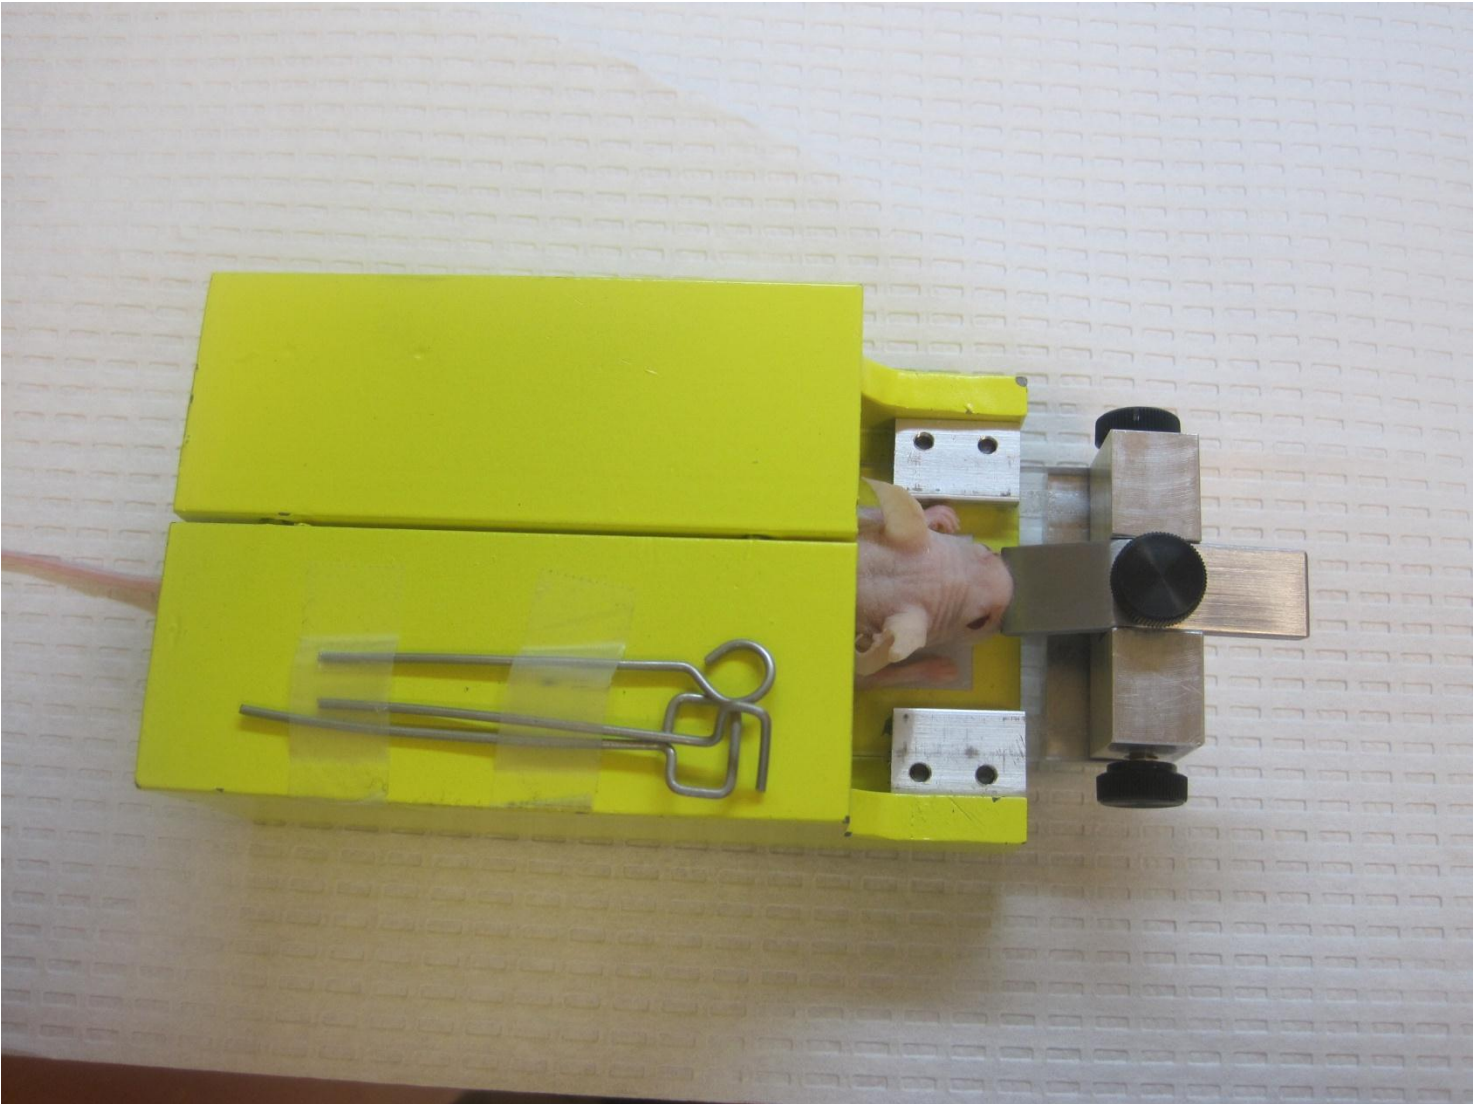

- Add lead protected board

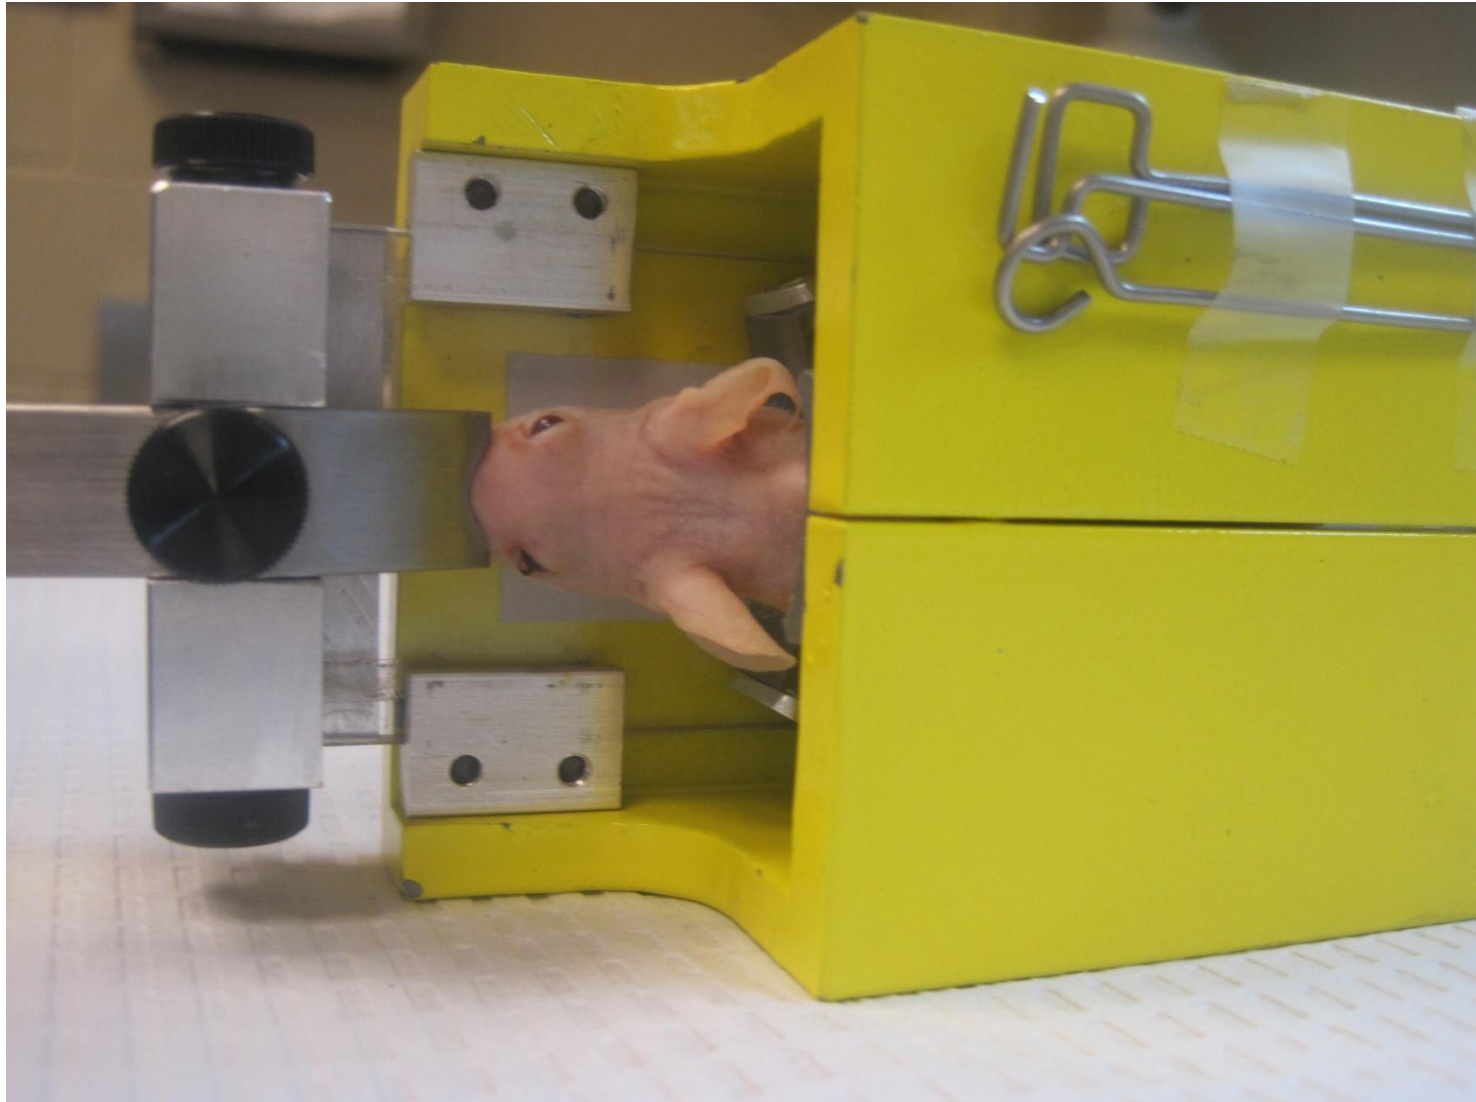

- Turn  $90^\circ$  ,The head was fixed very good

